



SOCKET SERIAL I/O CARD  
STANDARD AND RUGGEDIZED VERSIONS  
INSTALLATION INSTRUCTIONS FOR THE CASIO BE-300

STEP 1: REGISTER YOUR CARD.

Register your card online at [www.socketcom.com/product/prodreg.htm](http://www.socketcom.com/product/prodreg.htm).

STEP 2: CONNECT THE CABLE TO THE CARD (STANDARD CARD VERSION ONLY).

If using the standard version of the Serial I/O Card, with removable cable, attach the cable to the card. Press the side latches of the cable connector, insert the connector into the bottom of the card, and release. To remove the cable, press the side latches and pull gently.

STEP 3: INSERT THE CARD.

Insert the card into the CompactFlash I/O slot of your BE-300. Make sure the brown label is on top.

TECHNICAL SUPPORT

You can visit Socket's online forum for users to discuss technical support issues at: [www.socketforum.com](http://www.socketforum.com)

Feel free to visit Socket's technical support at:

Visit [www.socketcom.com](http://www.socketcom.com)  
Email [techsupport@socketcom.com](mailto:techsupport@socketcom.com)  
Phone 510-744-2720  
Fax 510-744-2727